

PowerControl

Installation instructions

6357



ENG70274

>>

Table of Contents

Scope of delivery / Preliminary
General instructions
Installation principle
Changing Programs
Trouble shooting
Installation example

>>

Scope of delivery

- Tuning module
- Harness
- Dummy plug
- Fixing set
- Installation instructions

>>

Preliminary

This tuning system is specifically customized and programmed for your vehicle. Due to production variations of engines in general, the expected result of the tuning system can turn out differently (higher or lower). Also, the increased performance always depends on the maintenance condition and mileage of the vehicle.

If the power is too high, shown by a strong soot formation, disturbed engine run, engine misfire or the initiation of the engine emergency, you can fine-adjust the system. (see chapter “Programs”).

IMPORTANT: When changing the program in this case, contact your dealer or the manufacturer!

General instructions

Read this installation guide carefully before starting the installation so that you will be able to use all the technical advantages of the systems and do not start with the installation before you have read and understood the instructions.

If you comply with the advice given below (1) you will avoid an early termination of the product guarantee and you will be enjoying your product for years to come.

(2) Never install the system if the ignition is on. Pull the ignition key.

(3) After switching off the ignition, wait for 5 minutes until all electric devices are turned off.

(4) If possible, install the module in a dry area in the engine compartment. Humidity and wetness contain minerals which cause corrosion to the electronic circuits. Fix the harness and protect it from humidity.

①



Note the following hints!

②



Switch off the ignition!

③



Wait 5 Minutes.

④



Install splash proof!

⑤



Attention when
Engine wash!

⑥



No installation
on hot engine parts!

⑦



Do not make any changes!

⑧



Disregard may
cause malfunction!

(5) Before every engine wash, remove the entire tuning system.

 
(6) Do not fix tuning systems to engine parts that could heat up. Never fix the module directly or close to the engine (engine block). High temperatures can reduce the lifespan of electronic devices and can deform or melt specific plastics materials.

(7) Take care that the harness does not touch the parts in motion and the metal parts to avoid friction. Do not make any changes to the harness (do not make it any longer or shorter).


(8) In case of the malfunctioning of the system due to any non-compliance with the instructions during the installation of the tuning modules, the product guarantee will be terminated.

>>

Installation

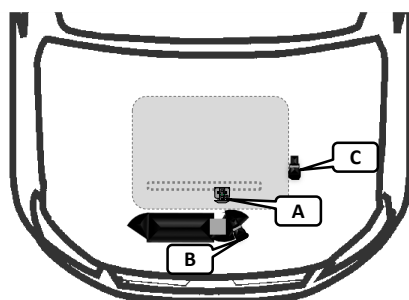


Engine longitudinal
page 12-17

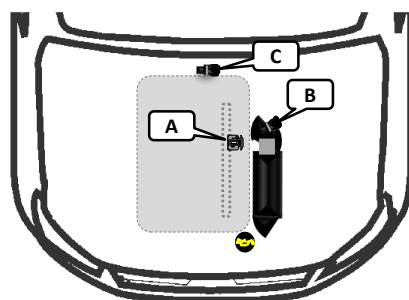 

Engine crosswise
page 9-11

 - A** Rail Pressure Sensor(3 pin)
- B** Boost Pressure Sensor (4 pin)
- C** Camshaft Sensor(3 pin)

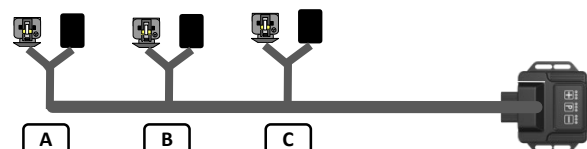

Harness Sticker:



You purchased a modern engine tuning system for your vehicle that features DTE Systems' multi-map technology, specially designed for your vehicle and engine type. In the factory setting the device already has been set-up specifically for your vehicle and engine type and is ready to use. Your tuning system includes 3 specific programs Sport, Dynamic and Efficiency that can be selected depending on your personal driving situation and optimization requirement.

Remarks

- The system's factory setting is adjusted to fit your personal vehicle, a further adjustment is not required.
- The LEDs are signaling an active tuning system and show the selected program.
- In case of blinking LEDs, the keypad lock is active (Fig. A).

Setting an alternative program

Deactivate the keypad lock by pressing and holding the **buttons + and –** for a minimum of 3 seconds.

Important: Press and hold buttons until all 9 LEDs are blinking at the same time.

Fig. A


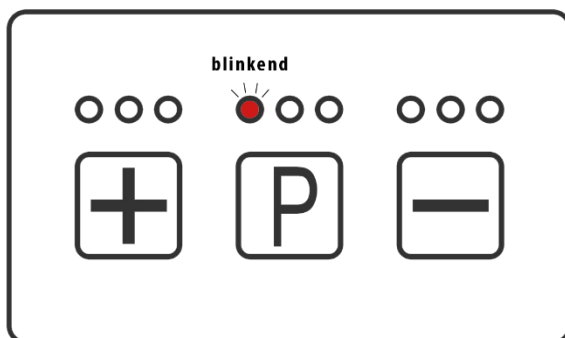


Fig. B

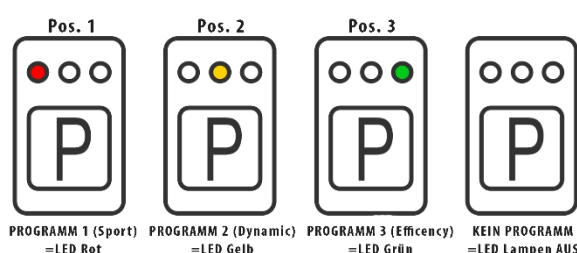 

By pressing of **button P** you can switch between the activated **programs**. The colored LED are showing the active program (Fig. B):

Sport (Factory setting) – The Sport program provides full performance in every driving situation

Dynamic – The Dynamic program offers a balanced performance ideal for changing driving situation in city and autobahn traffic.

Efficiency (only for X and RX systems) – The Efficiency program optimizes the efficiency of the engine for a fuel-saving driving pattern

Stock – Your vehicle will be set into stock without any engine optimization (no LEDs when keypad is deactivated, 3 colored LEDs while keypad lock activated)

Fine adjustments of performance levels

- Engines can have stock tolerances in performance that require an adjustment of the multi-maps. **Important:** Only change the multi-maps after consultation of your authorized dealer.
- By pressing the **buttons + or –** every program can be adjusted to the specific characteristics of you vehicle. Colored LEDs indicate the selected performance level.

All settings are automatically saved after 60 seconds and the keypad lock will be re-activated.

>>

Connecting smartphone app (only for X and RX systems)

Your tuning system features a modern smartphone interface that allows to control the central functions of your tuning system via your smartphone. To pair your PowerControl device with your smartphone, please follow the steps below.

Apple iPhone

- Download the „PowerControl“ app by DTE Systems for free via the Apple iTunes store on your smartphone.
- Turn on ignition to start your PowerControl module. You will see blinking LEDs.
- Deactivate the keypad lock by pressing and holding the **buttons + and –** for a minimum of 3 seconds. Your module now is in pairing mode.
- Open the PowerControl app and follow the instructions inside. Your smartphone will now connect to your PowerControl system. In case you are asked for a **PIN code**, please enter **000000**.

Android

- Download the „PowerControl“ app by DTE Systems for free via the Google Play store on your smartphone.
- Turn on ignition to start your PowerControl module. You will see blinking LEDs.
- Deactivate the keypad lock by pressing and holding the **buttons + and –** for a minimum of 3 seconds. Your module now is in pairing mode.
- Open Bluetooth settings inside the Android's settings menu.
- The PowerControl module is visible in pairing mode with the name DTE-xxxxxxx. **Pair the DTE device.** In case you are asked for a **PIN code**, please enter **000000**. For questions to pair a Bluetooth device with your Android phone, please consult your smartphone manufacturer.

Compatibility

The PowerControl App is compatible with all Apple iPhones (later than 4S) with iOS 10 or later as well as most smartphones with Google Android 7.0 or higher with Bluetooth LE. Please check the website for specific compatibility for your smartphone. We recommend to use the latest operating system version to prevent limited compatibility with Bluetooth LE standards. For further information please read instructions inside the app or in the app stores carefully. Features might vary depending on your smartphone's and vehicle's capabilities.

Your tuning system is equipped with one of the strongest certified Bluetooth LE radio modules to achieve the best possible connection quality. Keep distance as low as possible and prevent massive metallic components like main engine block or turbos to be located between module and the car's interior to improve reception. Strong Bluetooth radio emitter in your surrounding might temporarily affect the radio connection and remote functions of the app, however, they will not compromise the functionality of your tuning system.

Legal notice

Usage of smartphones while driving is not allowed in many countries. Please comply to national legislation applicable to you. For usage we recommend to have a fixed smartphone mount in which the phone is placed before driving and instruments are preset.

Installation instructions

Error descriptions*	Problem solution
„The engine doesn't start.“	<ul style="list-style-type: none"> ▪ Check all connected components. Are the adapter plugs in the right position? ▪ Is a plug twisted connected? If possible? ▪ Do the LED's work properly (see chapter „Program Changing“)? <p><i>Error persists</i> > Replace module with enclosed blind plugs and start again.</p> <p><i>Error fixed?</i> Module is defective: Contact the vendor / manufacturer</p>
„The engine doesn't run smoothly. The engine is bucking.“	<ul style="list-style-type: none"> ▪ Check all connected components. Are the adapter plugs in the right position? ▪ Has the program been changed?(see chapter „Program Changing“)? ▪ <i>Error persists</i> > Contact the vendor / manufacturer
„The fail-save program runs immediately. The Malfunction Indication Light (MIL) flashes in the Instrument Cluster.“	<ul style="list-style-type: none"> ▪ Check all connected components. Are the adapter plugs in the right position? ▪ Reduce the tuning module by one or two levels (see chapter „Program“). ▪ <i>Error persists</i> > Contact the vendor / manufacturer
„The fail-save runs in higher RPM.“	<ul style="list-style-type: none"> ▪ Check all connected components. Are the adapter plugs in the right position? ▪ Reduce the tuning module by one or two levels (see chapter „Program“). ▪ <i>Error persists</i> > Contact the vendor / manufacturer
„The engine shows no extra performance.“	<ul style="list-style-type: none"> ▪ To obtain the maximum benefit, use a higher-octane fueled (98 ROZ or higher) at gasoline engines. ▪ Reduce the tuning module by one or two levels (see chapter „Program“). ▪ <i>Error persists</i> > Contact the vendor / manufacturer
„The engine produces too much soot.“	<ul style="list-style-type: none"> ▪ Check all connected components. Are the adapter plugs in the right position? ▪ Reduce the tuning module by one or two levels (see chapter „Program Changing“). ▪ <i>Error persists</i> > Contact the vendor / manufacturer
„How can I get back to the original performance of the engine?“	<ul style="list-style-type: none"> ▪ Change program to stock (see chapter „Program“) <i>or</i> ▪ Follow the steps below: <ol style="list-style-type: none"> 1. Turn off the ignition. 2. Wait until all electrical consumers are off. 3. Remove the tuning module of all connected components or use included dummy plug.

* The fault description applies to both diesel and gasoline engines.

>>

Installation example



Engine mounting: longitudinal

Open the engine hood. Remove the engine cover (**D**).



 
Localise the 3 pin rail pressure sensor.



The rail pressure sensor is located at the end of the common rail bar (**B**).

>>

Installation example

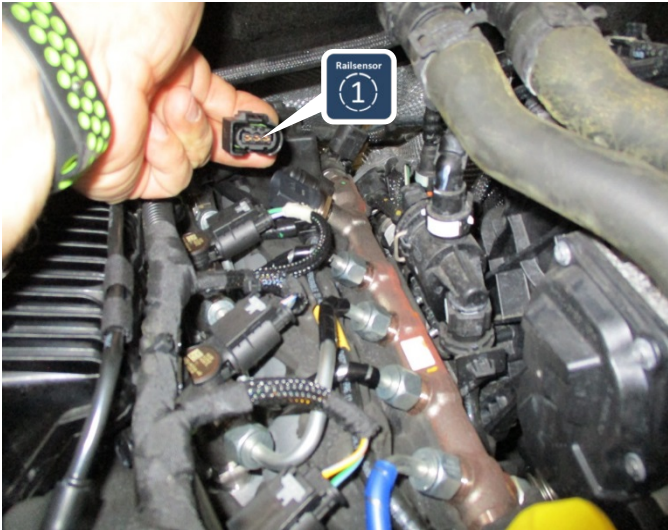

To disconnect the rail pressure plug press the locking lever. Connect the rail pressure adapter in between both connections.



Localise the 4-pin boost pressure sensor. It is located right next to the engine.



To disconnect the boost pressure plug press the locking lever. Connect the boost pressure adapter in between both connections.

>>

Installation example



 
Localise the 3 pin camshaft sensor. It is located in the rear area from the engine.



To disconnect the camshaft sensor plug press the locking lever. Connect the camshaft adapter in between both connections. Move the adapter cable not in parallel with injection pipelines or ABS-control device connecting leads. Keep to very big distances. Fix the adapter cable with cable ties. Connect the module with the adapter cable. Check all connections again and reassemble the vehicle in reverse order.


>>

Installation example

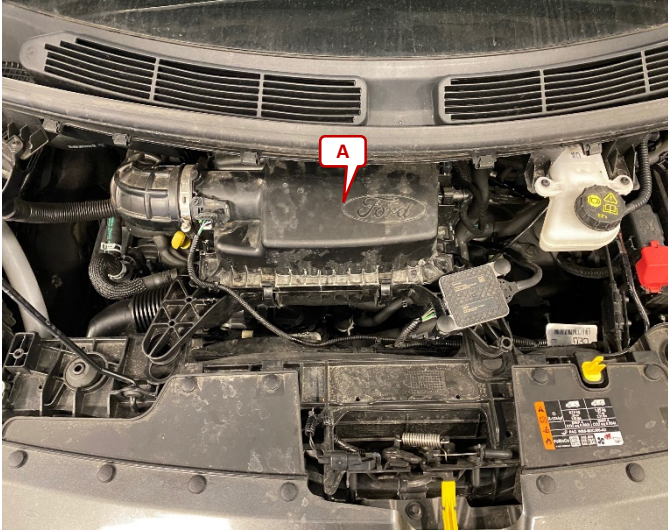


Engine mounting: transversely

 Open the engine hood. Localise the air filter box cover (A).

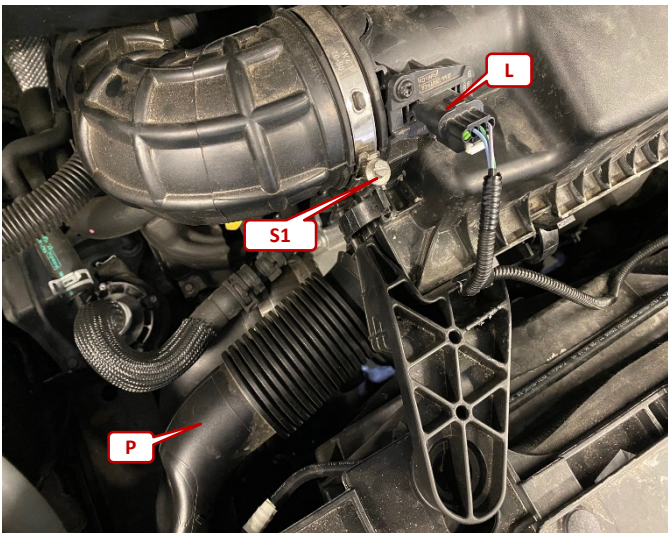

 Disconnect the suction pipe (P) from the air filter box. Disconnect the plug from the air flow Meter (L). Solve the hoes clamp (S1) on the left side of the air filter box. Pull out all connections from the air filter box.

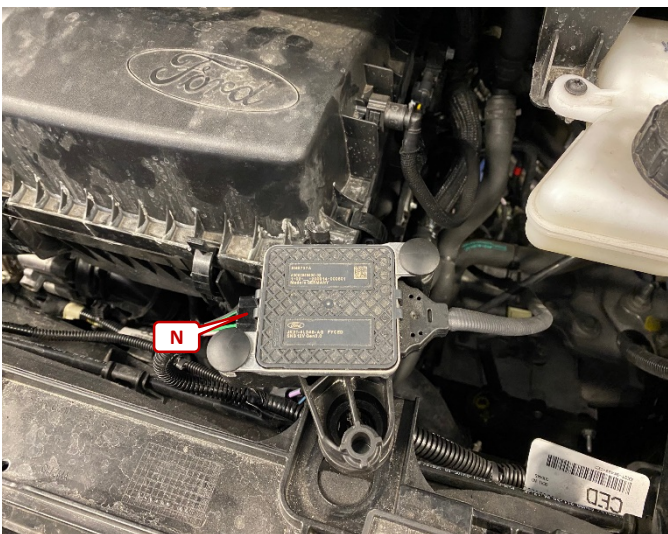


Open the plug (N) from the NOX sensor.

>>

Installation example



 Open the retaining clips (**C1**) ...

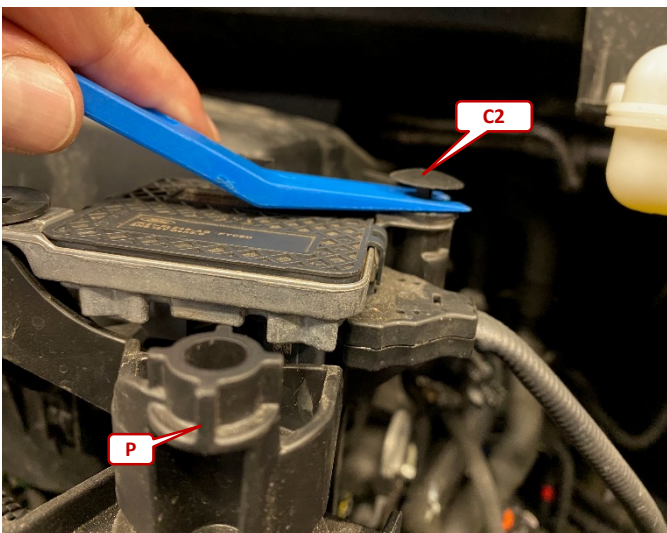


... and (**C2**).




Put the NOX sensor to the side.

>>

 Installation example

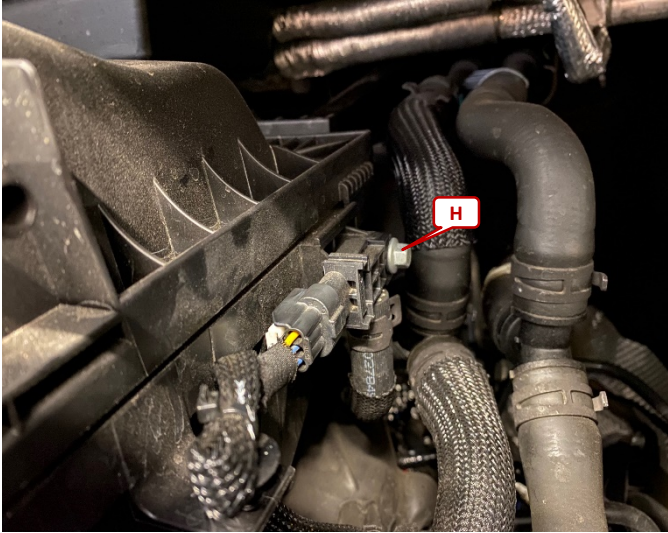

 Open the screw from the holder (**H**) on the right side.

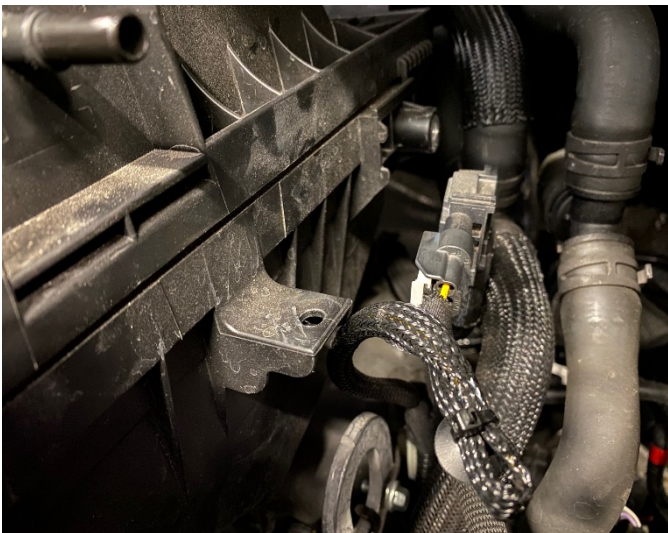


Disconnect all clamps from the air filter box.




Pull the air filter box carefully first forward and then up.

>>

 Installation example

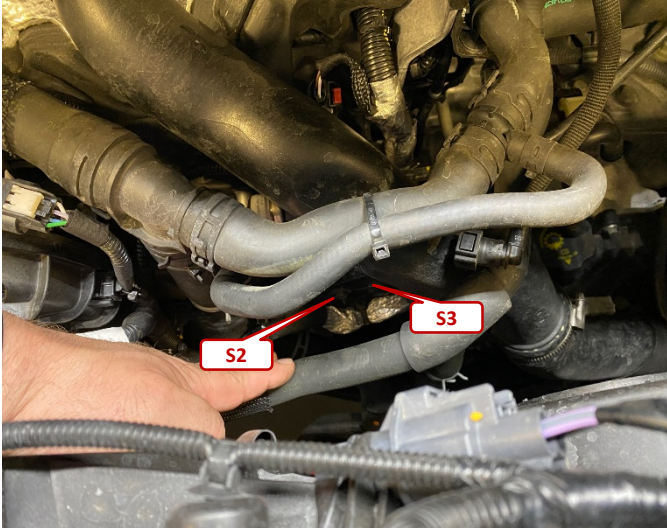

 Solve the two screws (**S2**) and (**S3**) from the suction pipe.

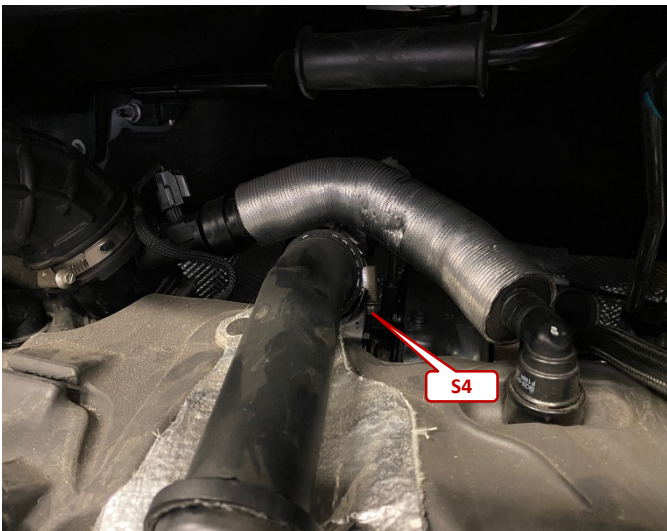

Solve the hose clamp (**S4**) and pull out the suction tube .



Lift the cover slightly to get access to the rail pressure sensor.

>>

 
Installation example



To disconnect the rail pressure plug press the locking lever. Connect the rail pressure adapter in between both connections.




Localise the 3 pin camshaft sensor. It is located next to the rail pressure sensor.

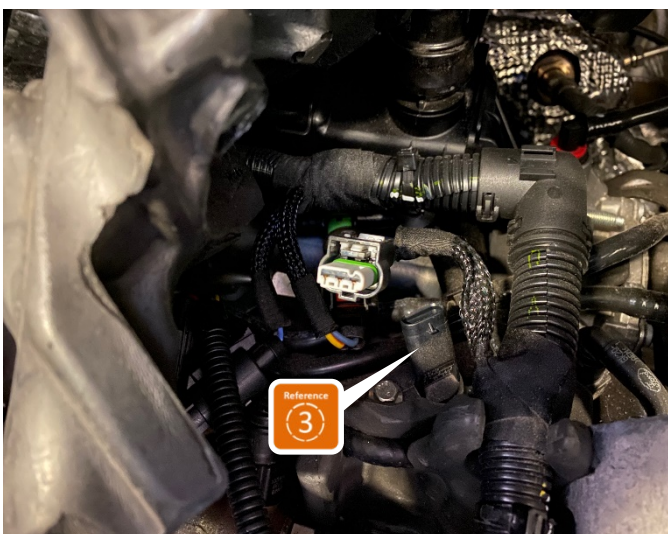

To disconnect the camshaft sensor plug press the locking lever. Connect the camshaft adapter in between both connections.

>>

 Installation example

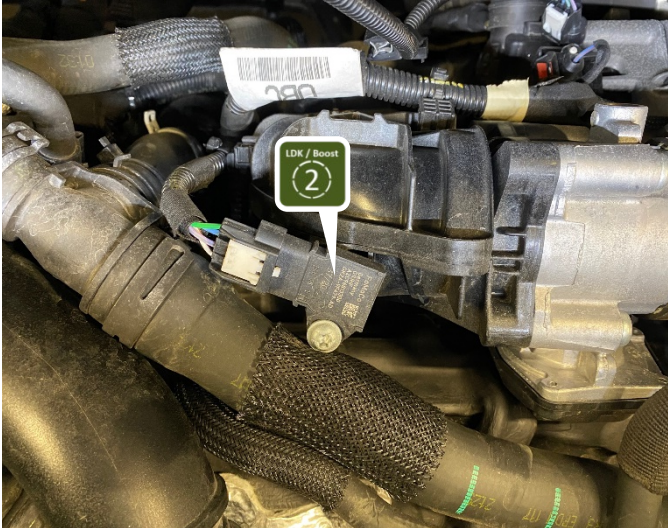

Localise the 4-pin boost pressure sensor. It is located in front of the engine.



To disconnect the boost pressure plug press the locking lever. Connect the boost pressure adapter in between both connections. Move the adapter cable not in parallel with injection pipelines or ABS-control device connecting leads. Keep to very big distances. Fix the adapter cable with cable ties. Connect the module with the adapter cable. Check all connections again and reassemble the vehicle in reverse order.